

What's included:

- (2) Two Bump Stops
- (1) One FREE sticker

**NOTE: Like the plastic strike pads provided with your hydraulic bump stops, No-Thuds are a wear item.  
\*Intended for a 1:1 bump stop ratio. Requires a smooth, clean strike surface for maximum durability.**

Instructions:


**Step 1:** Remove the Old Strike Pad:

- Unscrew the mounting bolt retaining the plastic strike pad on your hydraulic bump stop.
- Remove the plastic strike pad.

**Step 2:** Install DuroBumps No-Thuds:

- Insert DuroBumps No-Thuds, aligning the holes with the metal receiving cup.
- Use the original mounting hardware to fasten the No-Thuds to the hydraulic bump stop.

Now go hit some trails or cruise the mall ... whatever you're into!

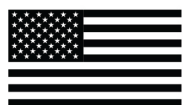

**MADE IN THE U.S.A.**  
[www.DuroBumps.com](http://www.DuroBumps.com)