

Part# DBR0J, DBR1J, DBR2J - Rear Bump Stops
Part# DBR0JT, DBR1JT, DBR2JT - Rear Bump Stops

What's included:

- (2) Two rear DuroBumps
- (1) One FREE sticker

Tools Recommended:

- Jack and jack stands
- Lug nut wrench
- Flathead screwdriver
- Torque wrench

Instructions:


Step 1: Lift the rear of the vehicle off the ground and support the frame of the truck with jack stands per vehicle manufacturers recommendations. Remove the rear tires.

Step 2: Use a flathead screwdriver to pry the OEM foam bump stops from the metal cups.

Step 3: With the OEM bump stop removed you can now insert your DuroBumps into the metal cup. Press the bump stop until it snaps into place. Pro-Tip: Lubricate the bump stop with liquid dish soap.

Step 4: Reinstall the rear tires. Torque lug nuts to manufacturers specifications.

Now go hit some trails or cruise the mall ... whatever you're into!

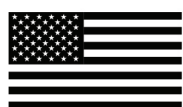

MADE IN THE U.S.A.
www.DuroBumps.com